







CAMA ROBIN

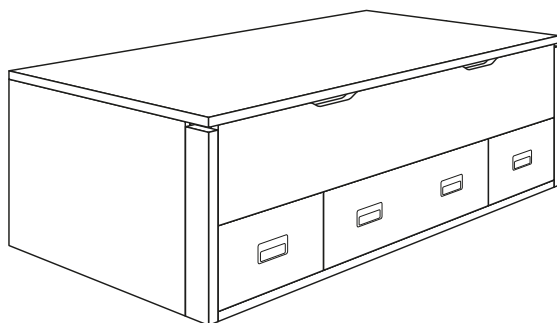

	España	689 26 40 50
	France	08 00 917 469
	Export	+34 926 882 408



60 MIN

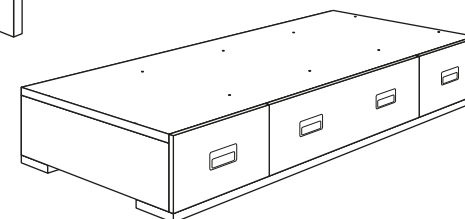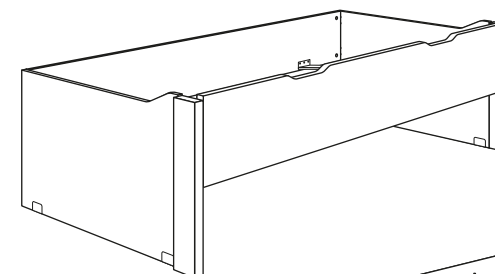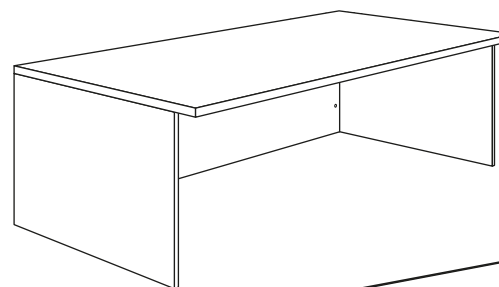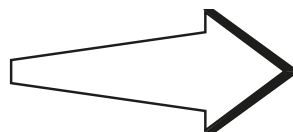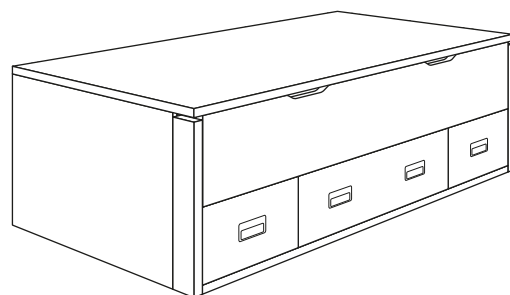

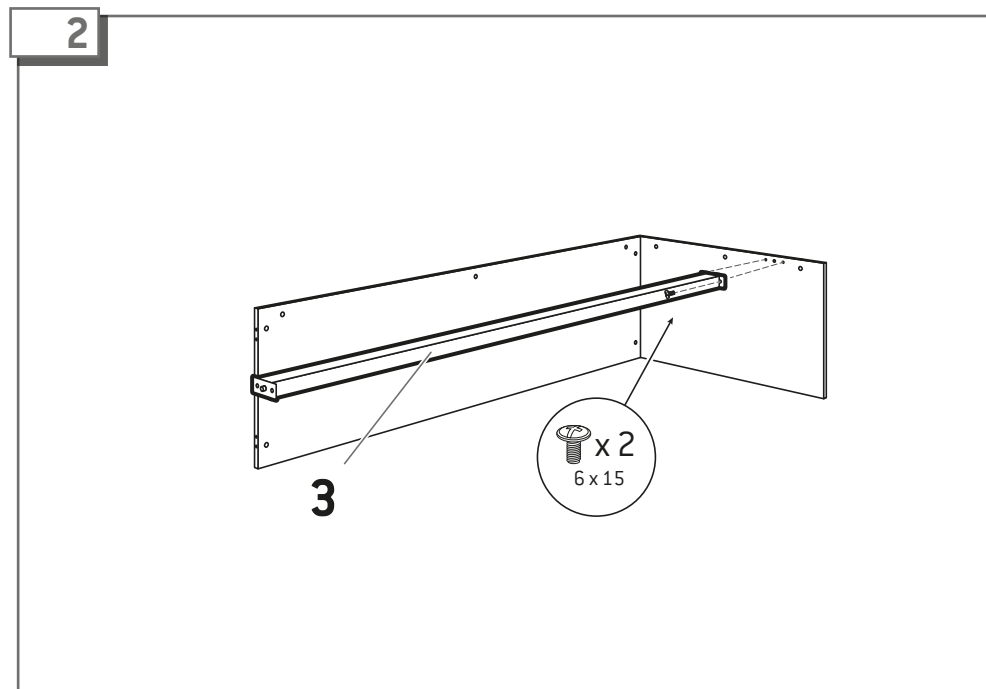
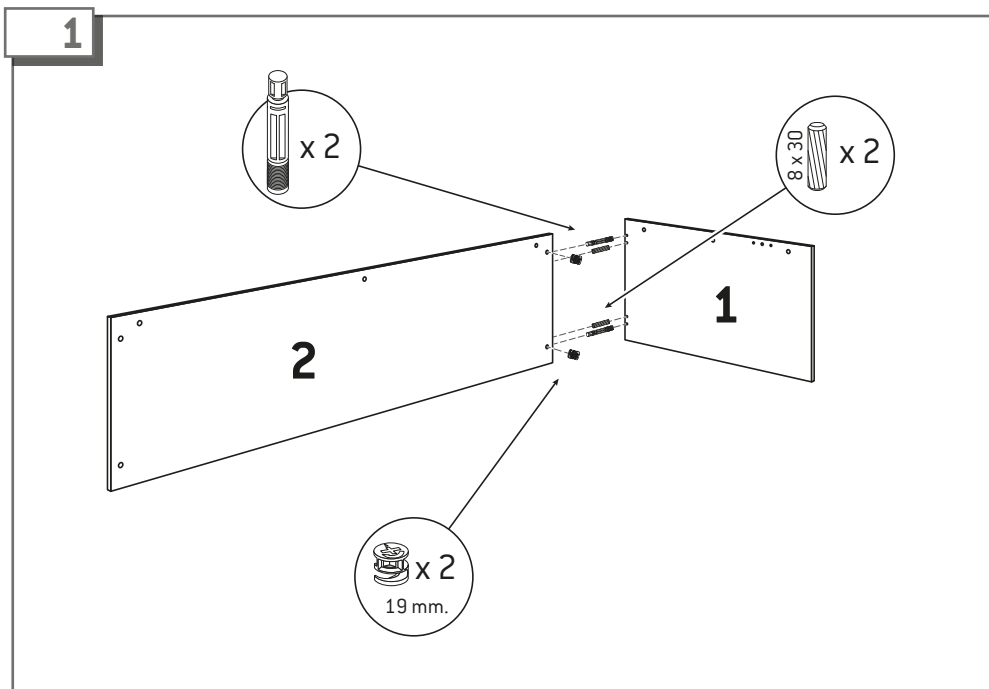
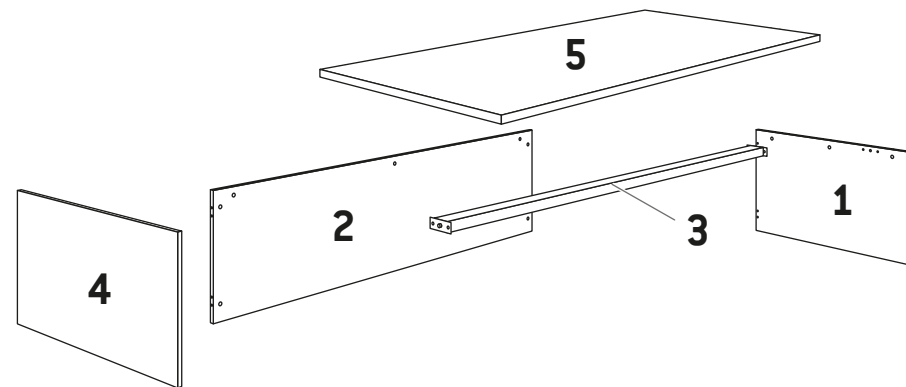
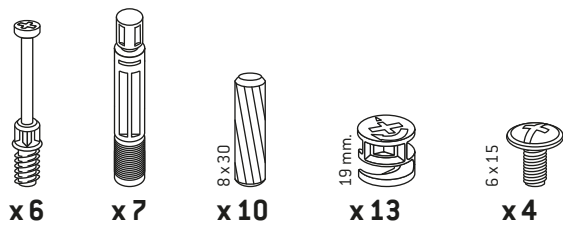
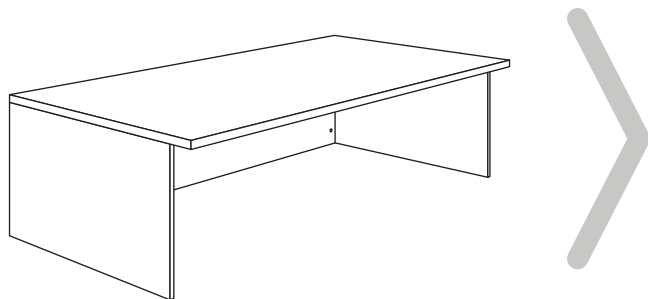





Diagram 4 illustrates the attachment of the front panel to the side panel. The front panel is shown being aligned with the side panel. The diagram includes callouts for the following components:





- 2 x 19 mm. cam bolts** (indicated by a circular callout with a cam bolt icon and "x 2" and "19 mm.")
- 2 x 6 x 15 mm. screws** (indicated by a circular callout with a screw icon and "x 2" and "6 x 15")
- 2 x 8 x 30 mm. dowels** (indicated by a circular callout with a dowel icon and "x 2" and "8 x 30")






4

Diagram 4 illustrates the assembly of the upper part of the cabinet. The main components shown are the top panel (5) and the side panels. The assembly steps are indicated by callouts:


- 3 x 8 x 30 screws (for the top panel)
- 6 x 8 x 30 screws (for the side panels)
- 3 x 19 mm washers and 3 x 19 mm screws (for the bottom rail)
- 3 x 19 mm washers and 3 x 19 mm screws (for the side rail)

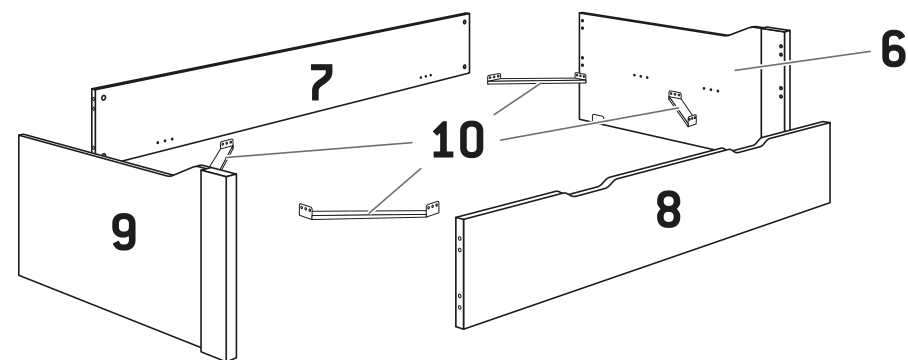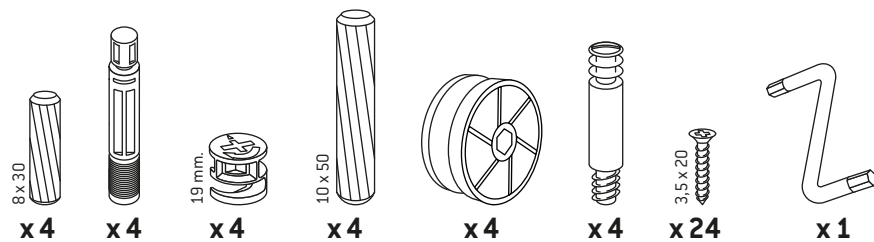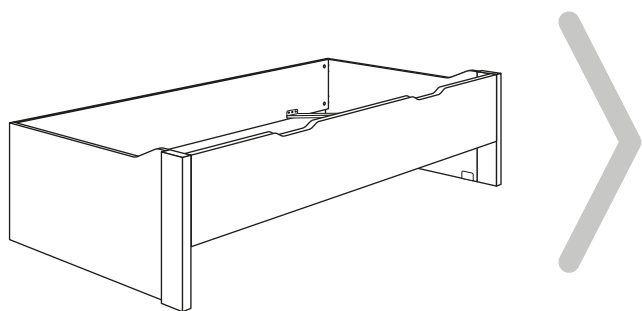

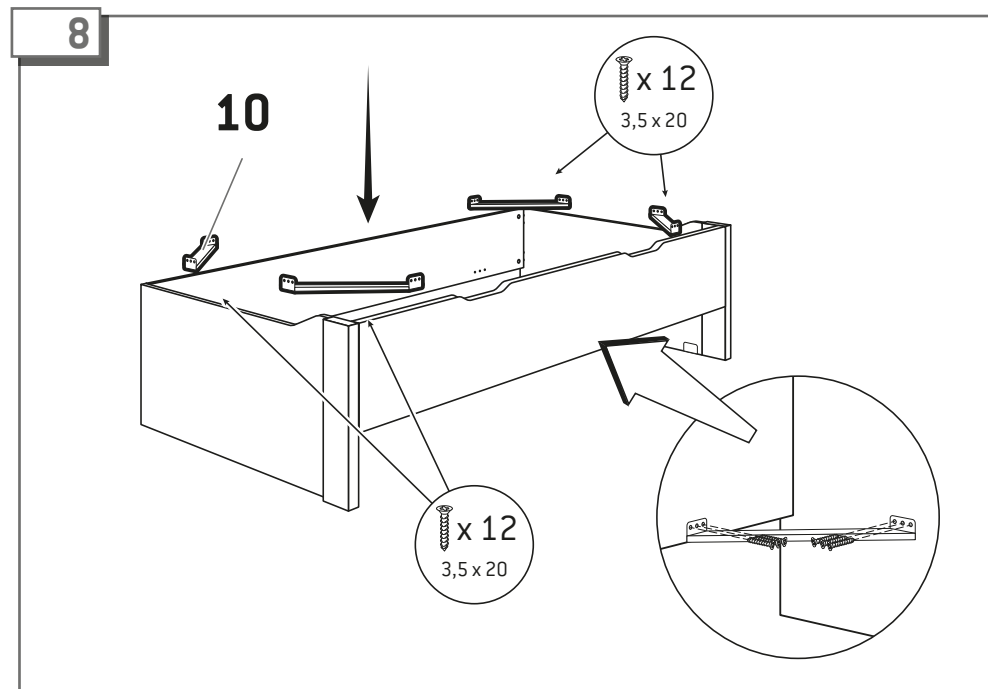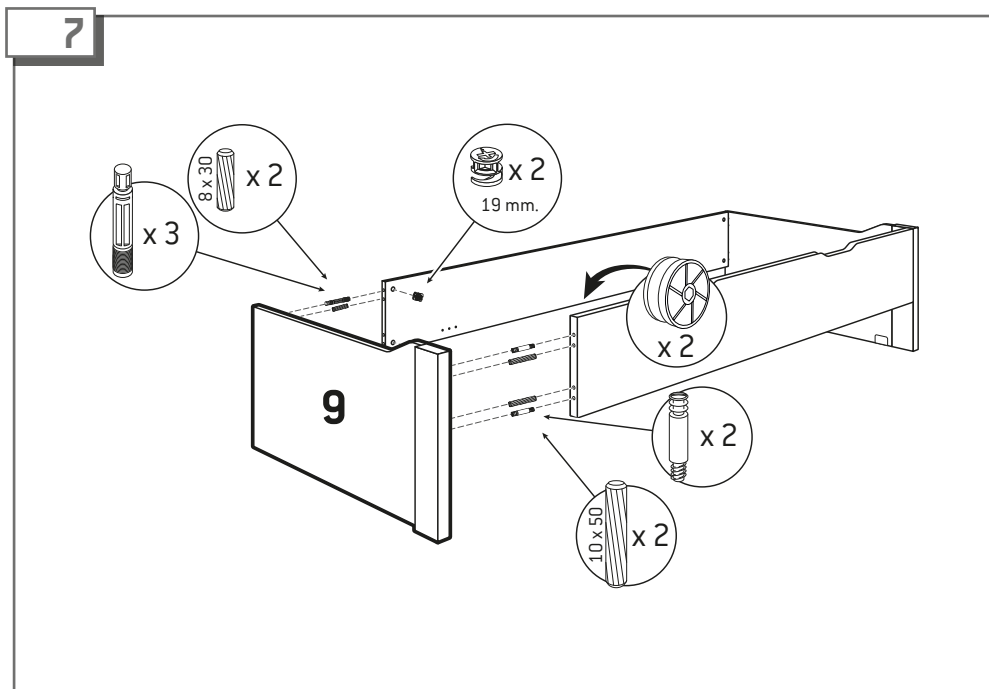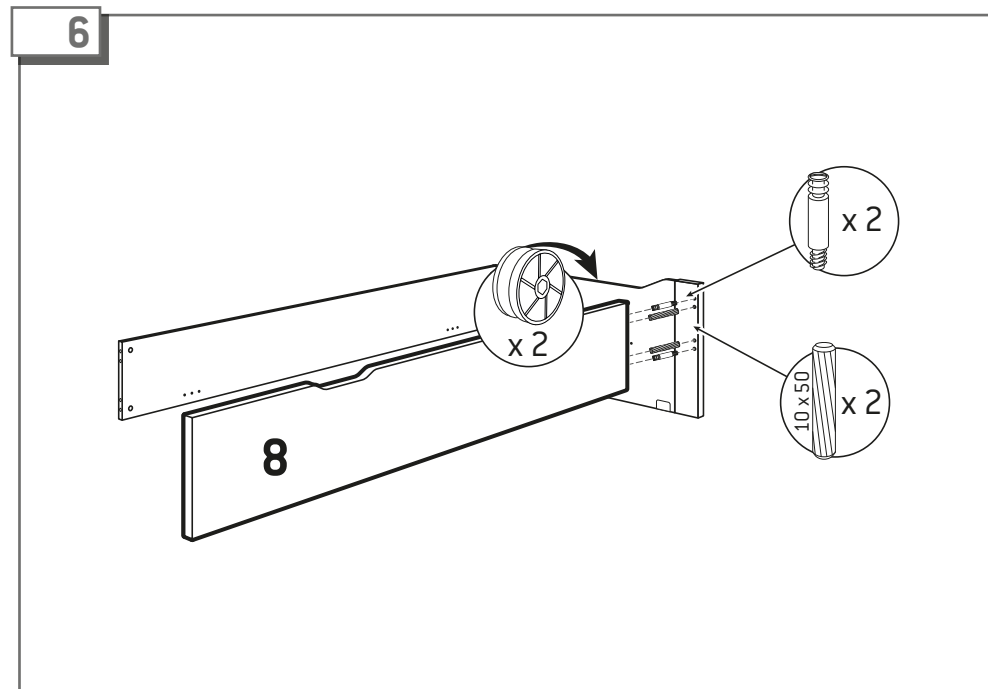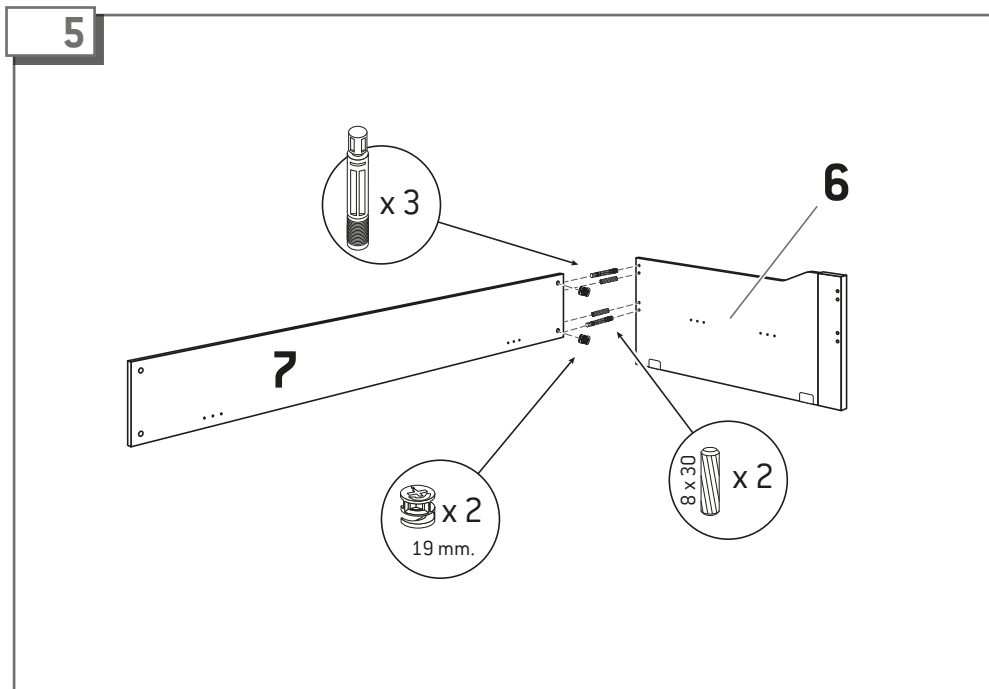


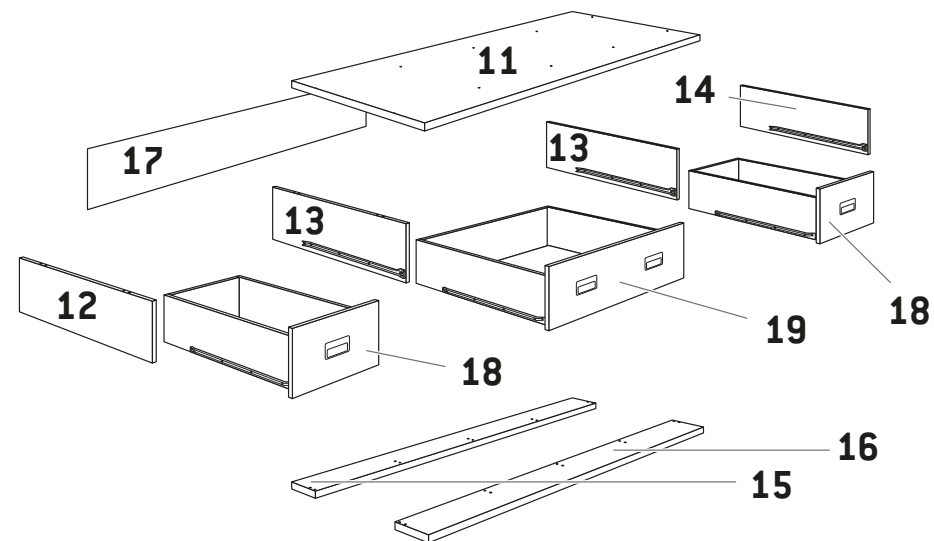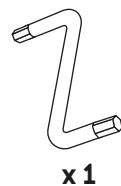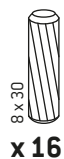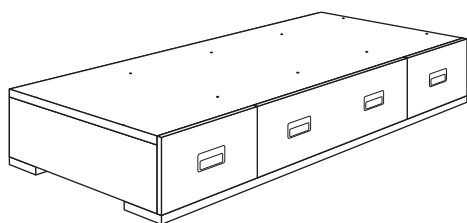

9

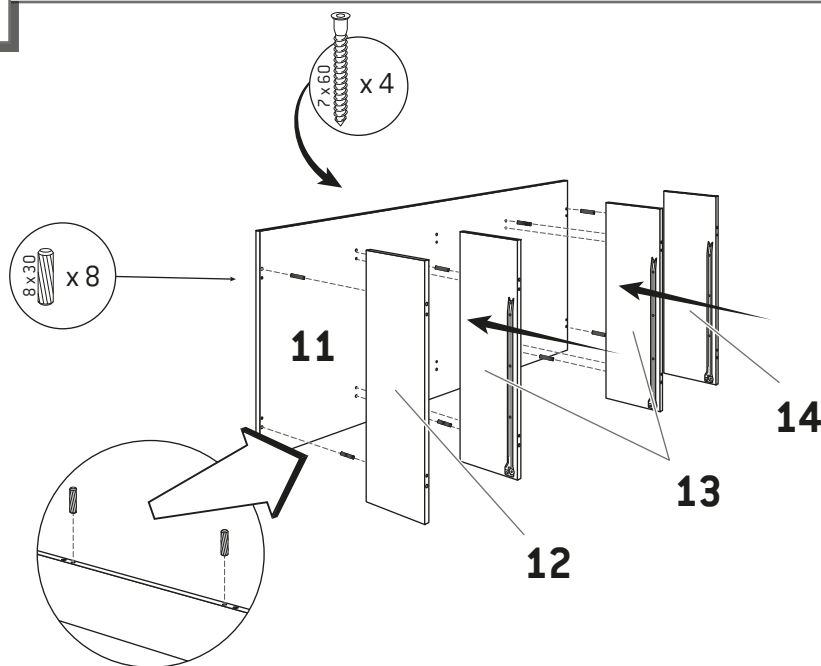


10

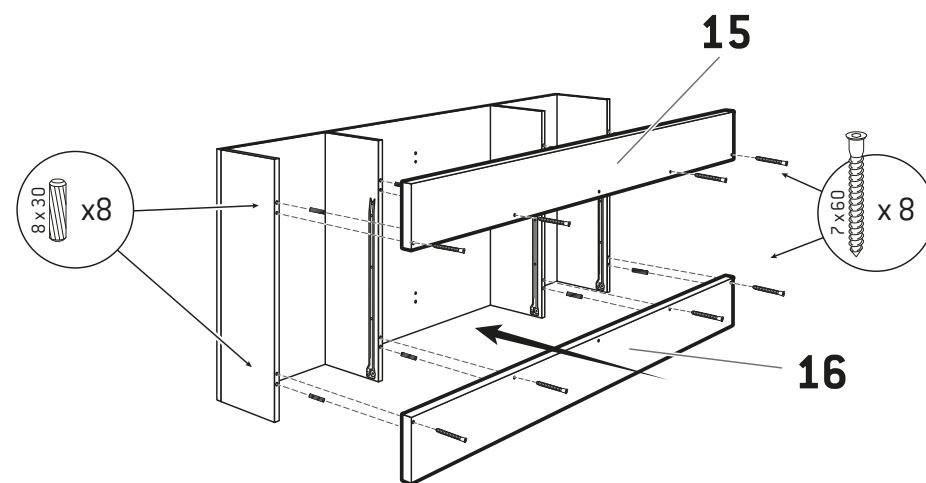


11

17


x 20
3 x 20

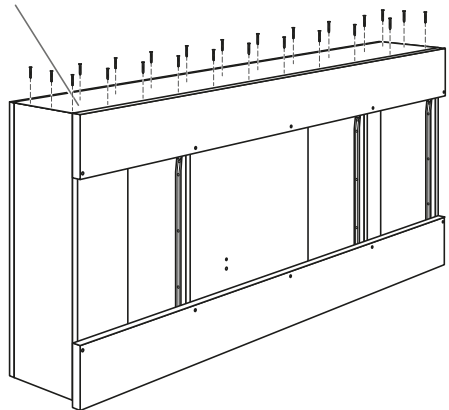


12

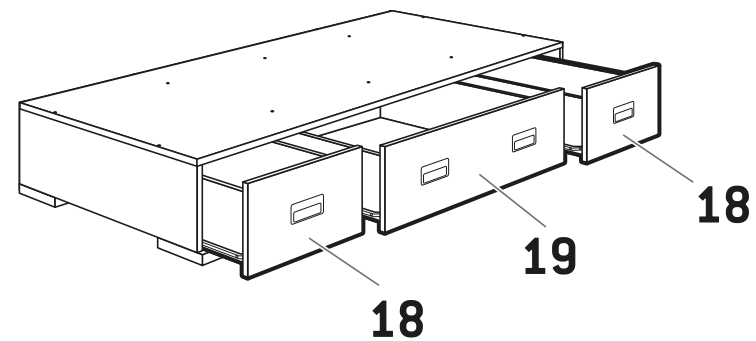

13






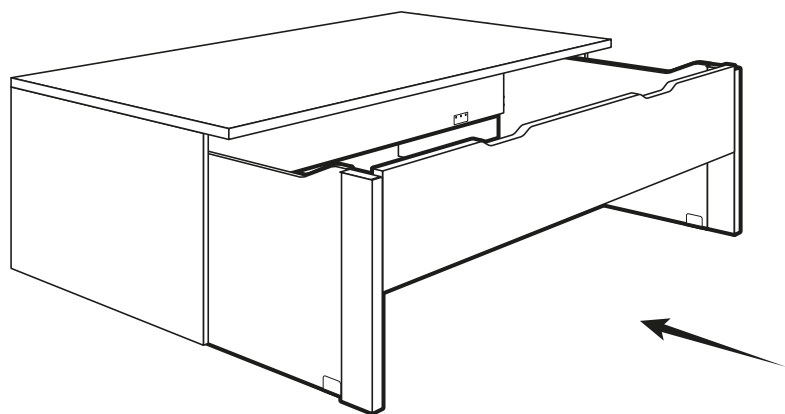


14

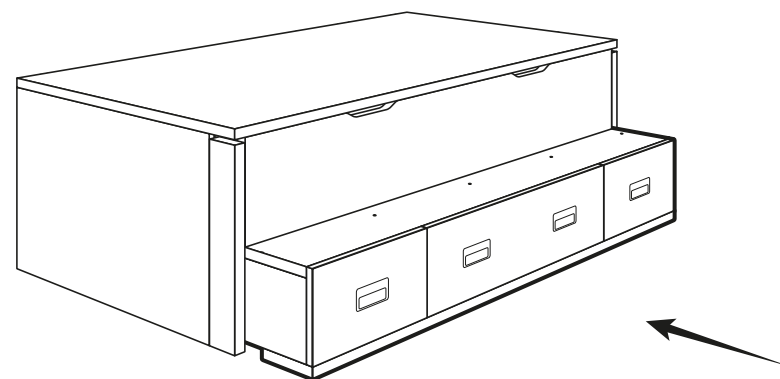





40 MIN

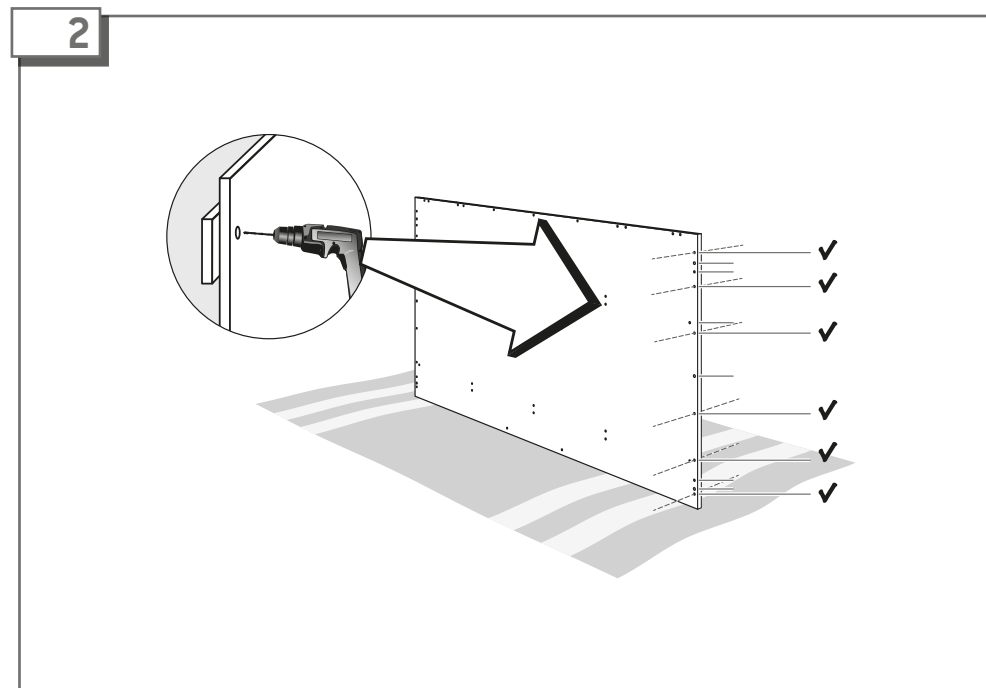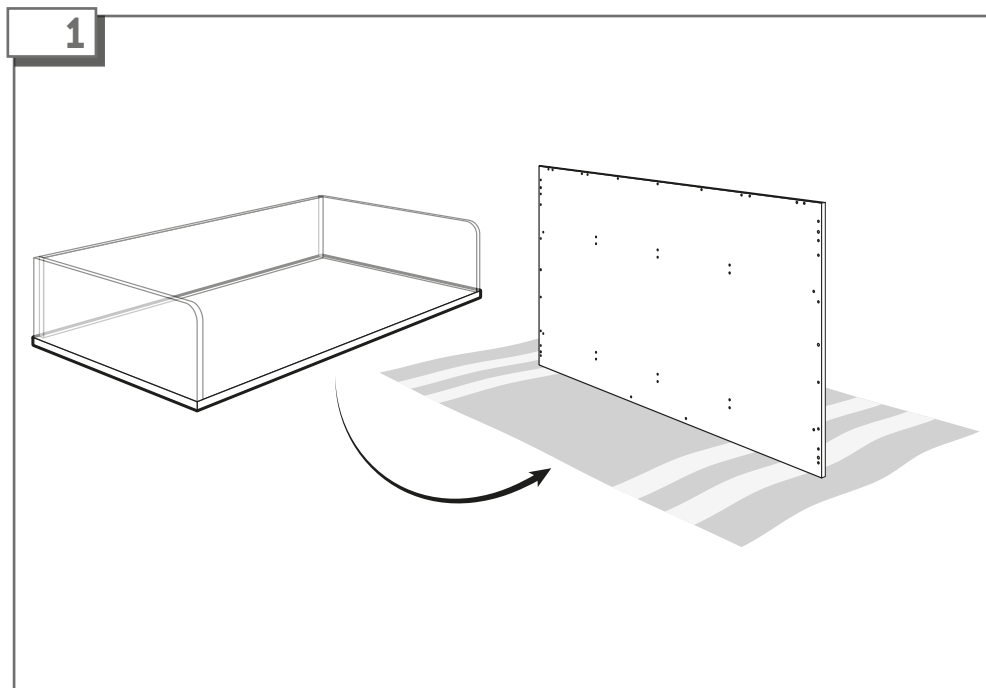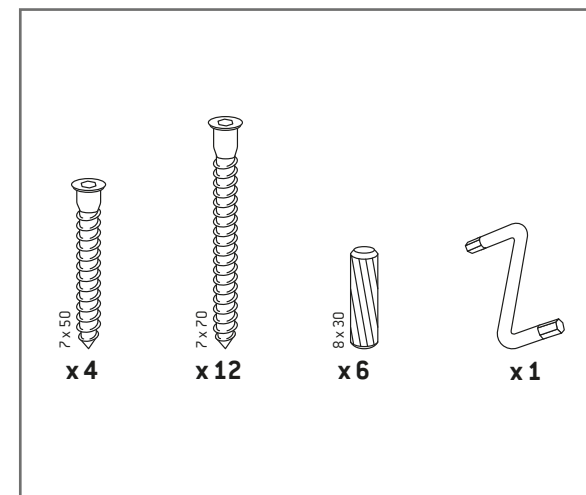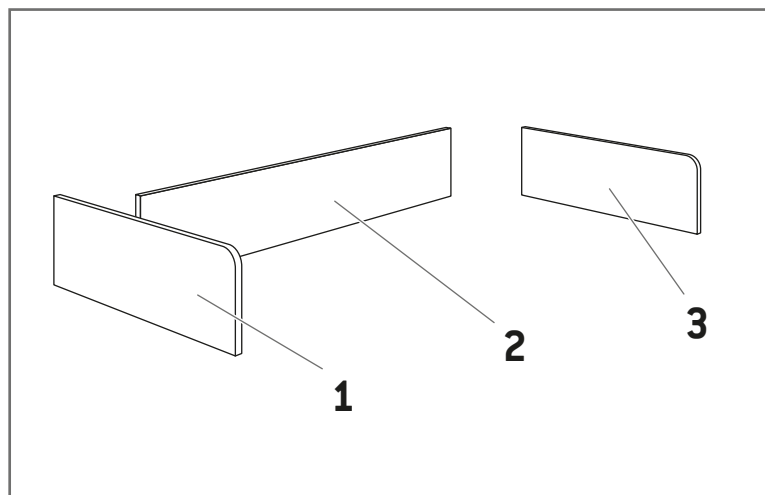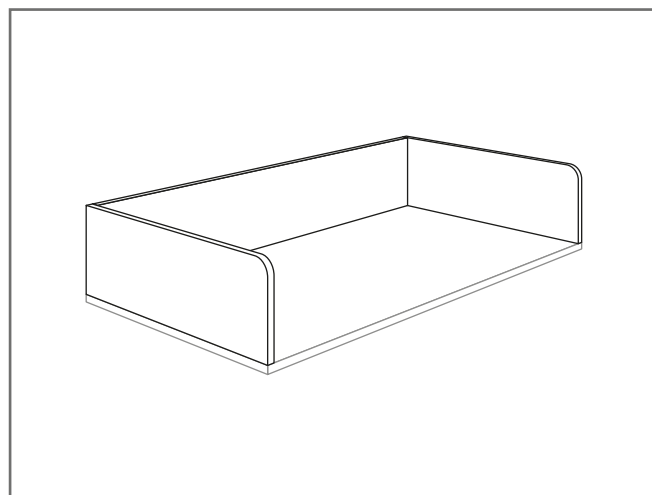


3

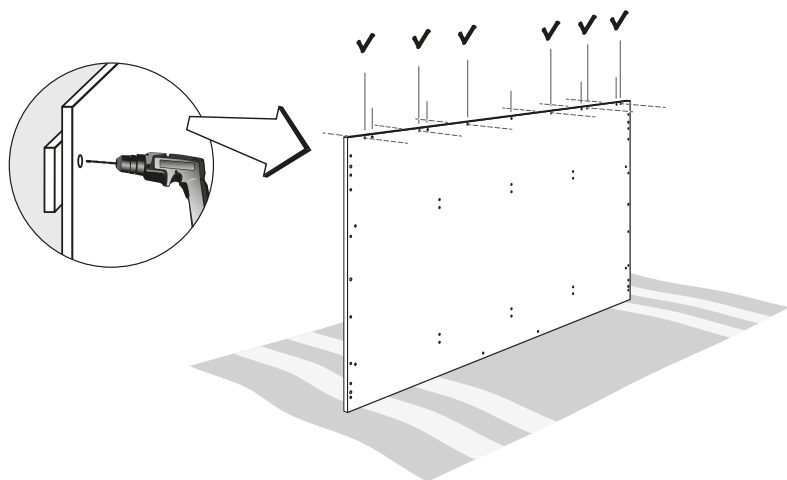


4

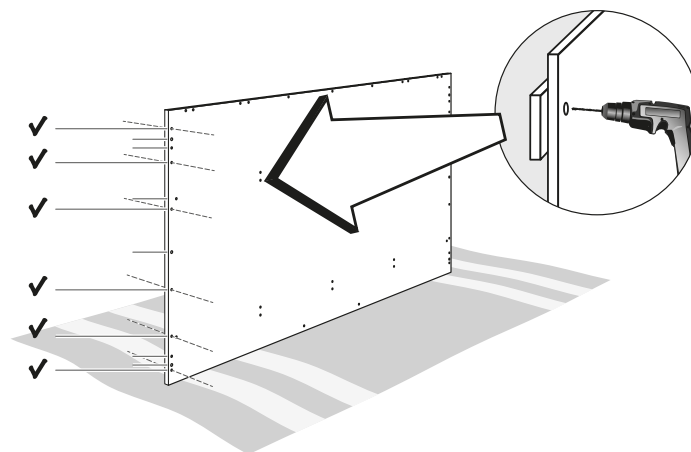


5

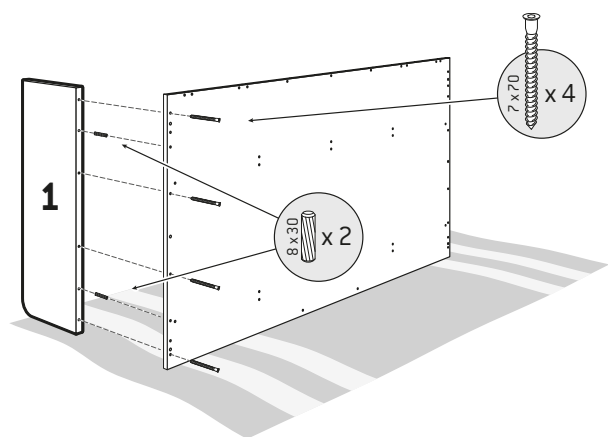

6

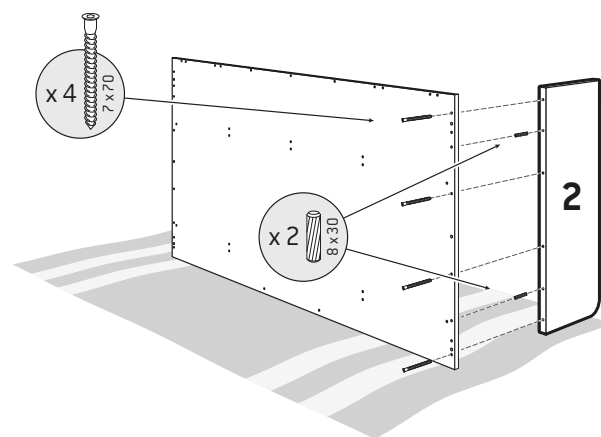

7

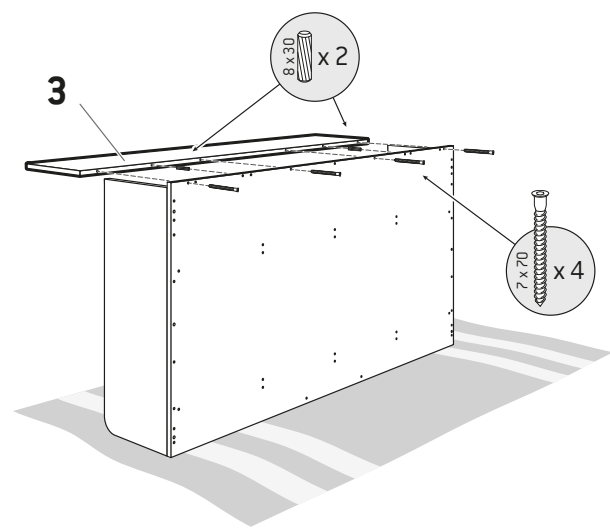

8

